

DIGITAL MP3 PLAYER (MP210)

FIRMWARE UPGRADE

(Release v0.1)


NOTE: Please read this latest operation steps before execute the Firmware upgrade.

If your MP3 player's display shows "Reformat as FAT16" when you power on the unit, or you cannot access your removable disk when the device is connected to your PC, you can also follow the instructions below to execute the firmware upgrade.

1. Go to the Oregon Scientific website (<u>www.oregonscientific.com</u>). Click the country site that you purchased the player from and download the latest MP210 firmware update (.zip file).

NOTE: If this is not the first time you are performing a firmware upgrade, please uninstall the old version before installing the new firmware update.

- 2. Unzip the file and install the firmware update by double-clicking "setup.exe".
- 3. After the firmware update has been installed, restart your computer.
- 4. Click Start>Settings>Control Panel>System>Hardware.
- 5. In Hardware windows, click to open **Device Manager**.
- 6. <u>Make sure you turn off the player</u>. Press and continuously hold the PLAY button while performing steps i) to iii):
 - i) Connect your player to the PC via the USB cable.
 - Make sure to wait until "PLAYER RECOVERY DEVICE CLASS" shown. on the device manager.

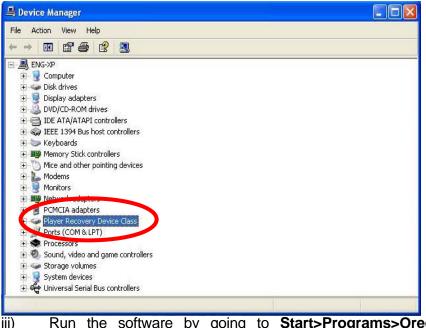

) Run the software by going to **Start>Programs>Oregon Scientific MP210>Firmware Upgrade**. You will see a progress bar running. 7. Release the **PLAY** button until the current and updated firmware version is displayed in a window.

	nware Upgrade
ersion	
Current Firm	nware Version
	000.020.500
Upgrade Fir	rmware Version
	000.020.500
	Show Details
)ownload op ☐ Eormat	

- 8. Tick the Format Data Area box and then click the **Start** button. **NOTE:** All data stored in the player will be erased.
- 9. Click the **Start** button to begin the firmware upgrade process.
- 10. Click the **Close** button to close the window once the process is completed.
- 11. Unplug the player from the computer.
- 12. Press the player's **RESET** button using a blunt narrow-tip stylus or ballpoint pen.
- 13. Turn the power on to begin operation again.