# Radio Controlled Daylight Projection Clock with Outdoor Temperature Model: DP200 / DP200A

# **USER MANUAL**

CONTENTS
Overview2
Front View2
Back View2
Remote Sensor3
Getting Started3
Power Supply3
Remote Sensor3
Sensor Data Transmission4
Clock4
Clock Reception4
Manually Set Clock4
LCD Display5
Alarm5
Projection5
Temperature6
Reset6

7
7
7
7
8





# **OVERVIEW**

# FRONT VIEW



- IR motion sensors (at the top): Snooze; change display mode
- ALARM ON / OFF (at the top): Enable / disable alarm
- 3. Time zone
- 4. Clock signal reception indicator
- 5. Clock, alarm and temperature display
- 6. °C / °F temperature unit display

- 7. Alarm icon
- 8. Outdoor temperature icon
- 9. Battery low indicator
- 10. Indoor temperature icon
- Projector: Project time, alarm status and indoor / outdoor temperature

# **BACK VIEW**







- 1. **FOCUS**: Focus the projected image
- 2. Adaptor socket
- 3. Battery compartment
- 4. EU / UK: Select clock reception
- 5. PROJECTION AUTO / CLOCK / OFF: Select the projection mode
- 6. 180° ROTATION: Rotate projection image by 180° dearees
- 7. SET ALARM: Set alarm
- 8. SET CLOCK: Enter clock setting mode
- 9. °C / °F: Select temperature unit
- 10. ▲ / ▼ : Increase / decrease settings; activate / deactivate clock reception signal
- 11. RESET: Reset unit to default settings

# REMOTE SENSOR



- 1. LED status indicator
- 2. Wall mount hole
- 3. Battery compartment

- 4. RESET hole
- 5 CHANNEL switch

# **GETTING STARTED**

# POWER SUPPLY

Batteries serve as back up. For continuous use of projector and backlight, always plug in the adapter socket. Make sure the socket outlet is easily accessible to the unit

#### To insert batteries:

- 1. Remove the battery compartment and insert the batteries, matching the polarities.
- 2. Press RESET after each battery change.



indicates main unit batteries are low.

# REMOTE SENSOR

# To set up the sensor:

- 1. Open the battery compartment.
- 2. Select a channel then press **RESET**.
- 3. Close the battery door.
- 4. Place the sensor within 30 m (98 ft) of the main unit using the table stand or wall mount.

TIP The transmission range may vary depending on many factors. You may need to experiment with various locations to get the best results.



3

# SENSOR DATA TRANSMISSION

The main unit will automatically search for the outdoor sensor. The sensor reception icon in the remote sensor area shows the status:

ICON	DESCRIPTION
רחם ← דחם	Main unit is searching for sensor(s).
	A channel has been found.
<u>"</u> DUT	Sensor 1 data received.
and ""	The sensor cannot be found.

**NOTE** If the sensor is not found, check the batteries, obstructions and remote sensor location.

#### For best results:

- Place the sensor out of direct sunlight and rain.
- Position the sensor facing the main unit, minimizing obstructions.
- Place the sensor in a location away from metallic or electronic objects.
- Position the sensor closer to the main unit during cold winter months.

# CLOCK

### **CLOCK RECEPTION**

This product is designed to synchronize its clock automatically with a clock signal.

### DP200:

Slide EU / UK to select the signal received.

- EU: DCF-77 signal: within 1500 km (932 miles) of Frankfurt, Germany.
- UK: MSF-60 signal: within 1500 km (932 miles) of Anthorn, England.

#### DP200A:

 WWVB-60 signal: within 3200km (2000 miles) of Fort Collins Colorado. Manually set clock to select time zone (Pacific, Mountain, Central or Eastern).

# To enable / disable signal reception:

Press and hold lacktriangle to enable or lacktriangle to disable signal reception.

**NOTE** Reception takes 2-10 minutes. If the signal is weak, it can take up to 24 hours to get a valid signal.

# Clock signal reception indicator:

STRONG SIGNAL	WEAK SIGNAL	NO SIGNAL
	S	S

# MANUALLY SET CLOCK

To set the clock manually, disable the signal reception first.

- 1. Press and hold SET CLOCK.
- Press ▲ or ▼ to change the settings.









- 3. Press SET CLOCK to confirm.
- The settings order is: time zone offset, 12/24 hr format, hour and minute.

**DP200**: Time zone offset sets the clock +/- 23 hours from the received clock signal time.

**DP200A**: Select the time zone: (P) Pacific, (E) Eastern, (C) Central or (M) Mountain.

# **LCD DISPLAY**

Wave your hand at least 3 inches above the IR motion sensors to toggle display modes between:

- Clock
- Alarm
- Outdoor temperature
- · Indoor temperature

# ALARM

# To set the alarm:

- 1. Press and hold SET ALARM.
- 2. Press ▲ / ▼ to set hour / minute.
- Press SET ALARM to confirm. indicates alarm is ON.

# To toggle alarms ON / OFF:

- 1. Press **SET ALARM** to display alarm time.
- 2. Press ALARM ON / OFF to turn alarm ON / OFF.

### To silence the alarm:

 Wave your hand above the IR motion sensors to silence it for 8 minutes.

OR

 Press ALARM ON / OFF to turn the alarm off and activate it again after 24 hours.

### **PROJECTION**

The ultra-bright LED enables daylight projection of time and temperature information.

# To activate projection:

Slide PROJECTION to AUTO or CLOCK.

- Slide to AUTO to toggle between current time and indoor / outdoor temperature.
- . Slide to CLOCK to project current time only.

# To adjust the projection image:

- Press 180° ROTATION to rotate the image by 180°.
- Focus the projector image by turning the FOCUS wheel

**NOTE** The installed CDS light sensor inside the unit will activate automatic projection / display dimming.

**NOTE** If projection is illuminated, do not look directly into the projector. Oregon Scientific will not be held responsible for any results or consequences arising from the misuse of this product.



5



# **TEMPERATURE**

To toggle temperature unit:

Press °C / °F.

**NOTE** Please keep the temperature sensor (adjacent to the adaptor socket) away from the main unit or electrical devices as heat from these devices will affect accurate indoor temperature readings.

# RESET

Press **RESET** to return to the default settings.

# **PRECAUTIONS**

- Do not subject the unit to excessive force, shock, dust, temperature or humidity.
- Do not cover the ventilation holes with any items such as newspapers, curtains etc.
- · Do not immerse the unit in water. If you spill liquid

- over it, dry it immediately with a soft, lint-free cloth.
- Do not clean the unit with abrasive or corrosive materials.
- Do not tamper with the unit's internal components.
   This invalidates the warranty.
- Only use fresh batteries. Do not mix new and old batteries.
- Images shown in this manual may differ from the actual display.
- When disposing of this product, ensure it is collected separately for special treatment.
- Placement of this product on certain types of wood may result in damage to its finish for which Oregon Scientific will not be responsible. Consult the furniture manufacturer's care instructions for information.
- The contents of this manual may not be reproduced without the permission of the manufacturer.
- Do not dispose old batteries as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.
- Please note that some units are equipped with a battery safety strip. Remove the strip from the battery compartment before first use.

**NOTE** The technical specifications for this product and the contents of the user manual are subject to change without notice.





# **SPECIFICATIONS**

TYPE	DESCRIPTION
MAIN UNIT	
LxWxH	85 x 90 x 90 mm (3.35 x 3.54 x 3.54 in)
Weight	510 g (17.99 oz) without battery
Indoor temperature range	0°C to 50°C (32°F to 122°F)
Outdoor temperature range	-30°C to 60°C (-22°F to 140°F)
Resolution	0.1°C (0.2°F)
Signal frequency	433 MHz
Main power supply	DC 5.0V power adapter
Back-up power supply	1 x CR2032 3 V battery
REMOTE UNIT (THN	132N)
LxWxH	92 x 60 x 20 mm (3.6 x 2.4 x 0.8 in)
Weight	62 g (2.22 oz)
Transmission range	30 m (98 ft) unobstructed
Temperature range	-30°C to 60°C (-22°F to 140°F)
Power	1 x UM-4 (AA) 1.5 V batteries

# **ABOUT OREGON SCIENTIFIC**

Visit our website (www.oregonscientific.com) to learn more about Oregon Scientific products. If you're in the US and would like to contact our Customer Care department directly, please visit: <a href="www2.oregonscientific.com/service/support">www2.oregonscientific.com/service/support</a>

OR Call 1-800-853-8883.

For international inquiries, please visit: <u>www2.</u> oregonscientific.com/about/international

# **EU-DECLARATION OF CONFORMITY**

Hereby, Oregon Scientific, declares that this Radio Controlled Daylight Projection Clock with Outdoor Temperature (model: DP200 / DP200A) is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the signed and dated Declaration of Conformity is available on request via our Oregon Scientific Customer Service.



**COUNTRIES RTTE APPROVAL COMPLIED** 

All EU countries, Switzerland CH



# **FCC STATEMENT**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING Changes or modifications not expressly

7

approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

# **DECLARATION OF CONFORMITY**

The following information is not to be used as contact for support or sales. Please call our customer service number (listed on our website at www.oregonscientific.

<u>com</u> or on the warranty card for this product) for all inquiries instead.

We Name:

Oregon Scientific, Inc.

Address: 19861 SW 95th Ave., Tualatin, Oregon

97062 USA

Telephone No.: 1-800-853-8883

declare that the product

Product No.: DP200 / DP200A

Product Name: Radio Controlled Daylight
Projection Clock with Outdoor

Tomporature

Temperature

Manufacturer: IDT Technology Limited

Address: Block C, 9/F, Kaiser Estate, Phase 1.41 Man Yue St., Hung Hom.

Kowloon, Hong Kong

is in conformity with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference. 2) This device must accept any interference received, including interference that may cause undesired operation.



